



## Follow Me

## ST20 /ST30


- ① Cut a standard panel

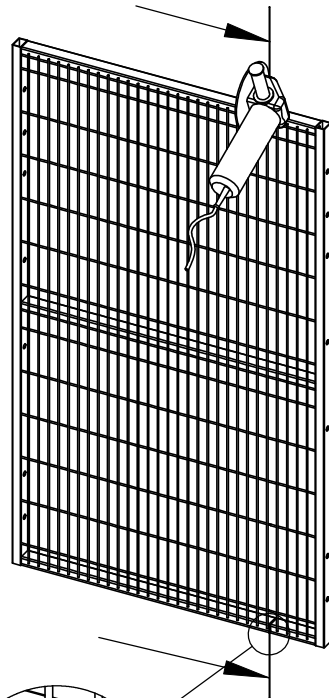



Cut tight to a wire

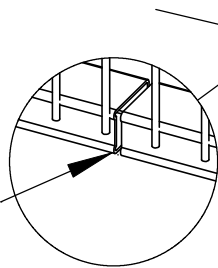


- ② Add the END profile

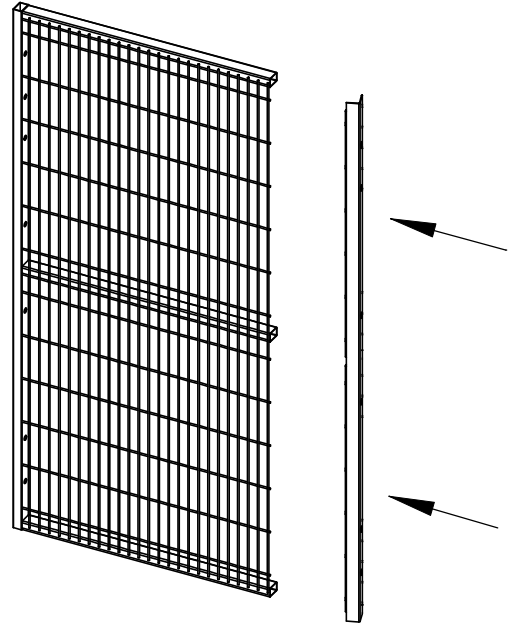

- ③ Tighten the profile around the wires

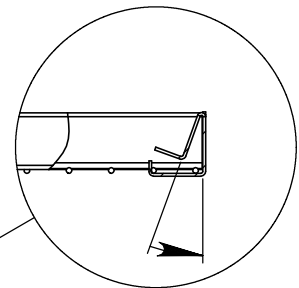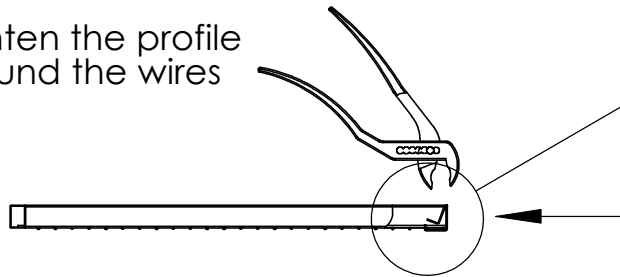

- ④ Lock the profile with bolt in holes not used for fixing

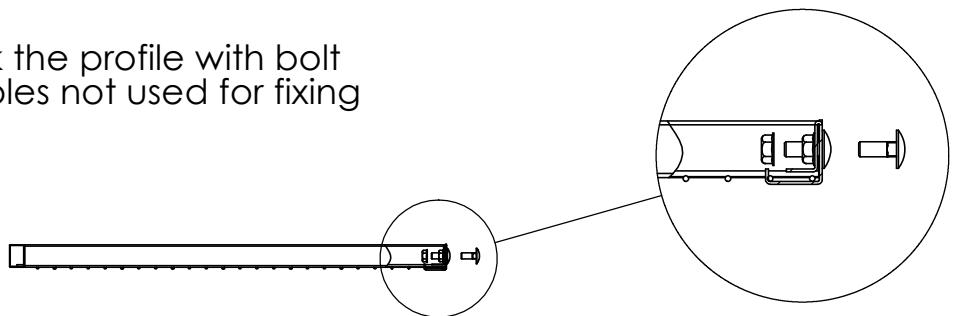



END 2050, 1250



① 15x2x16



② M8x16


Follow Me

ST20 / ST30

Rapid Fix:



③ 8,4x15x1,5 plastic

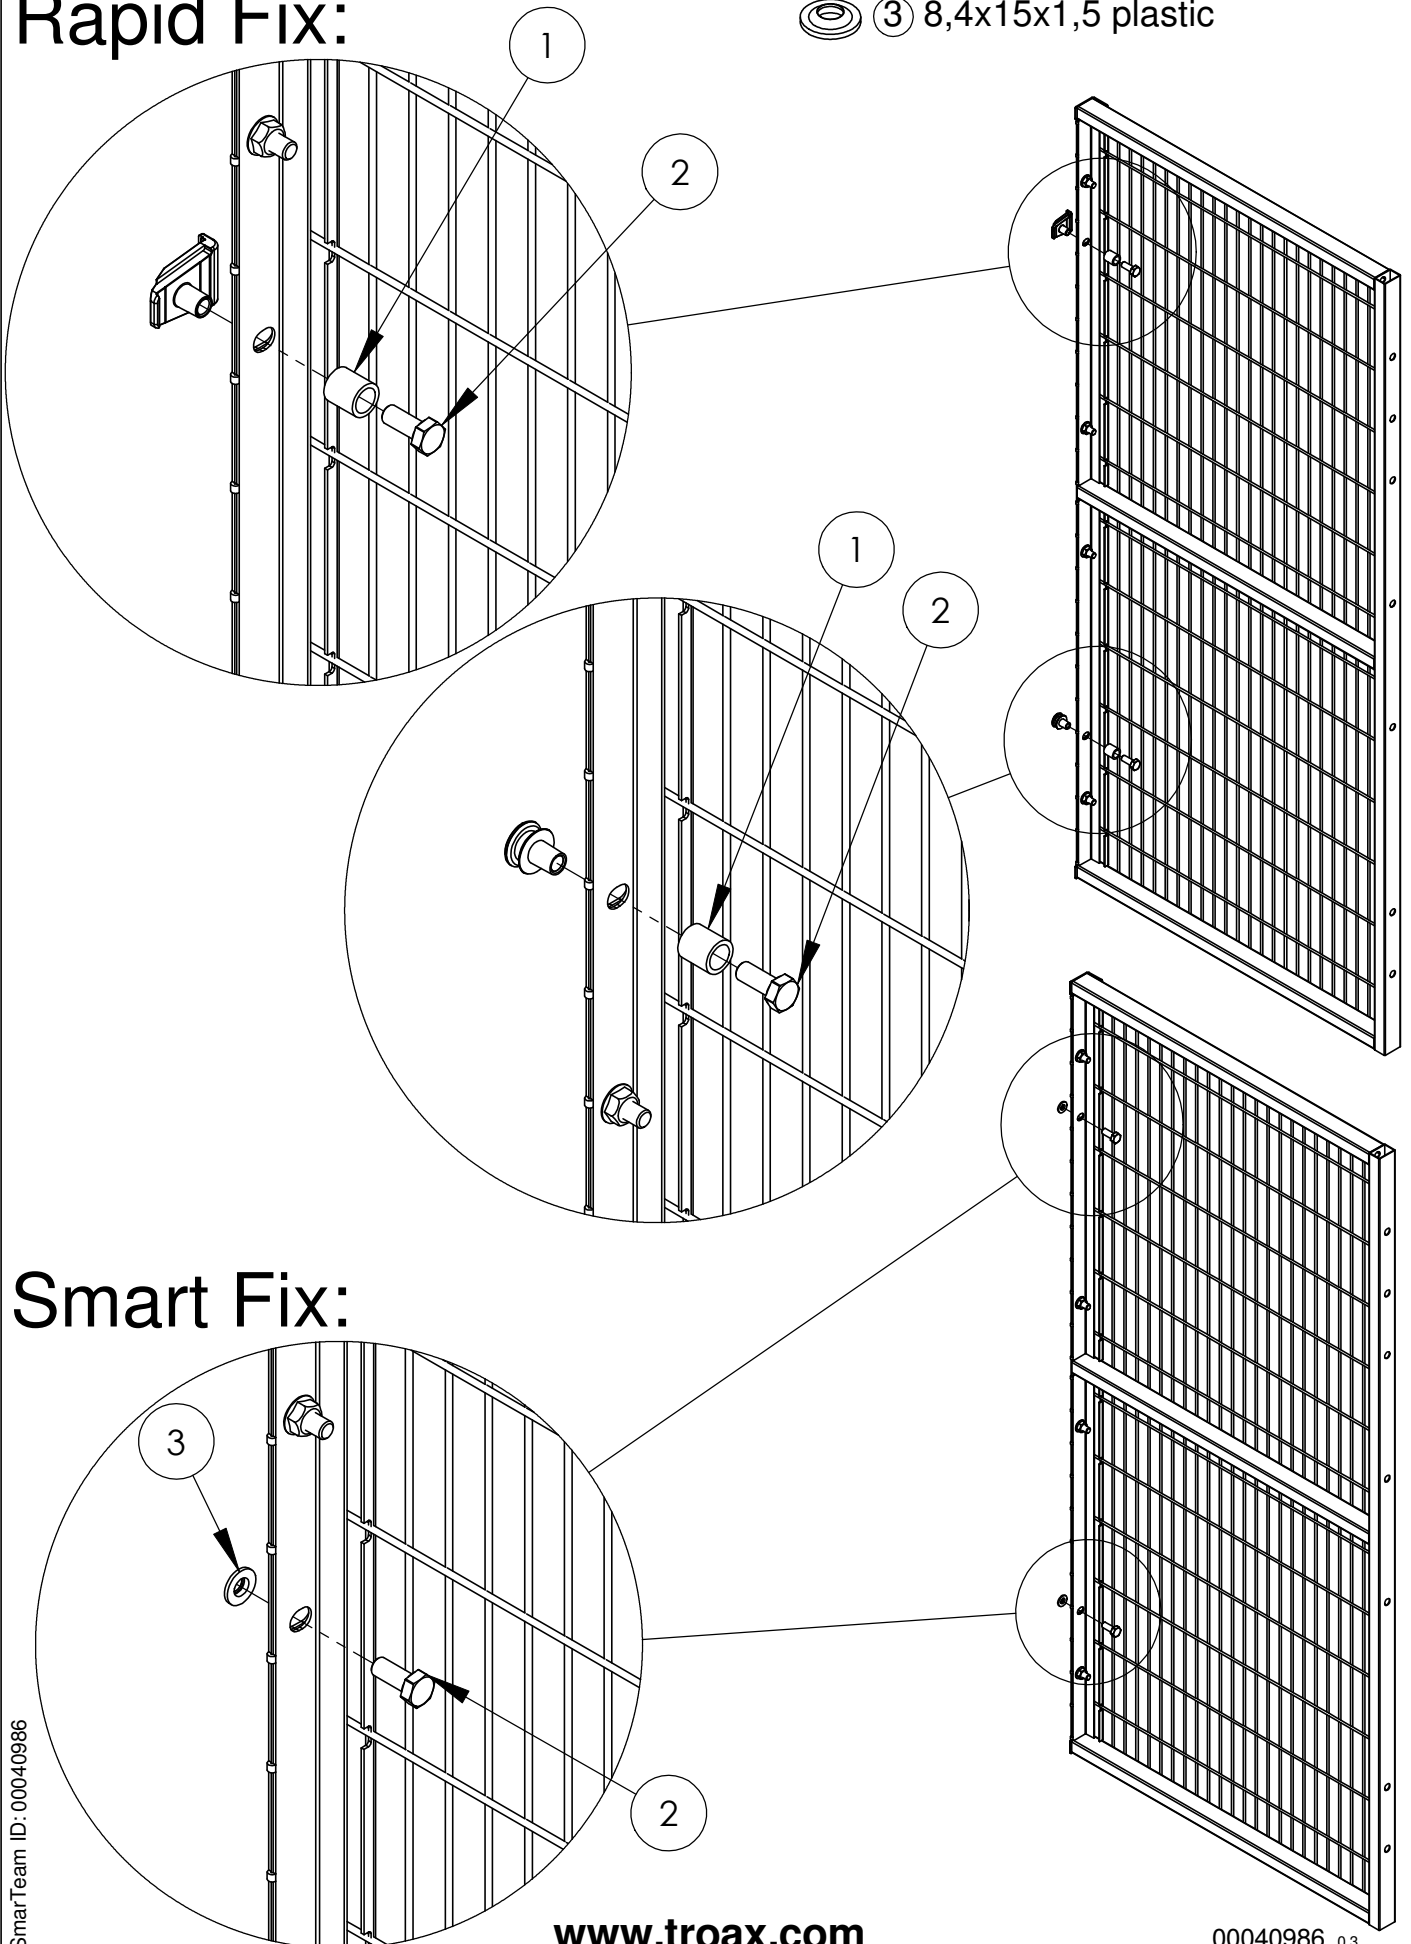

SmartTeam ID: 00040986