




7600  
Kit Bag

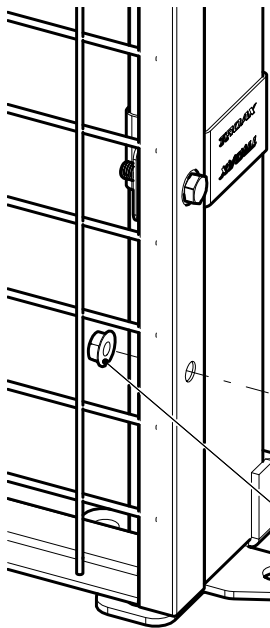


7640  
Kit Bag

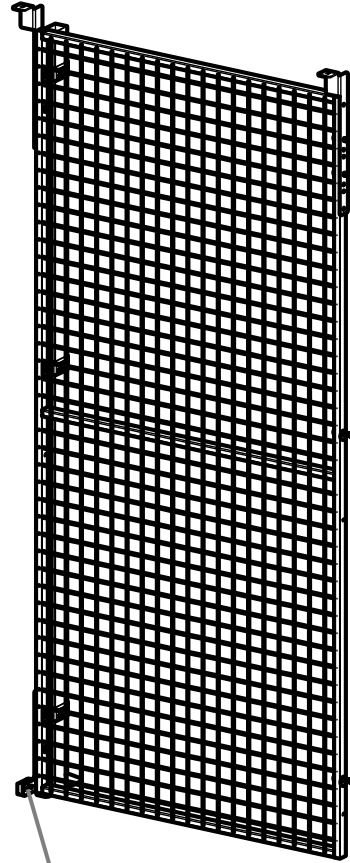






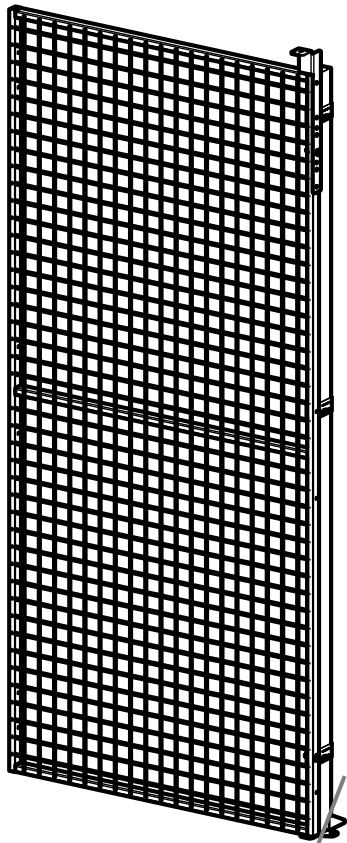



36900539  
M8x35 M6S  
89050042  
36700033  
M8x20 MF6S  
89050143  
89050525  
M8

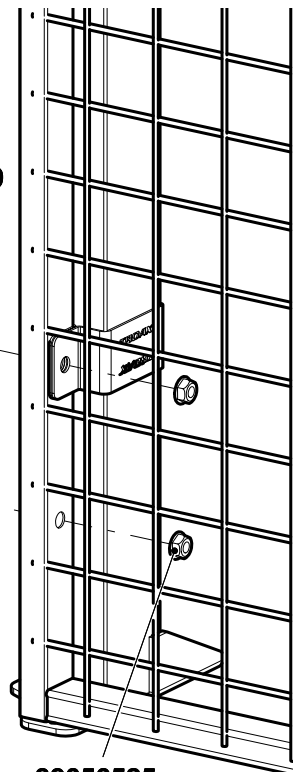






36900589  
M8x45 M6S  
00032565  
M8x35 M6S  
89050042  
89200013  
89050021  
M6x25 MF6S  
89050525  
M8



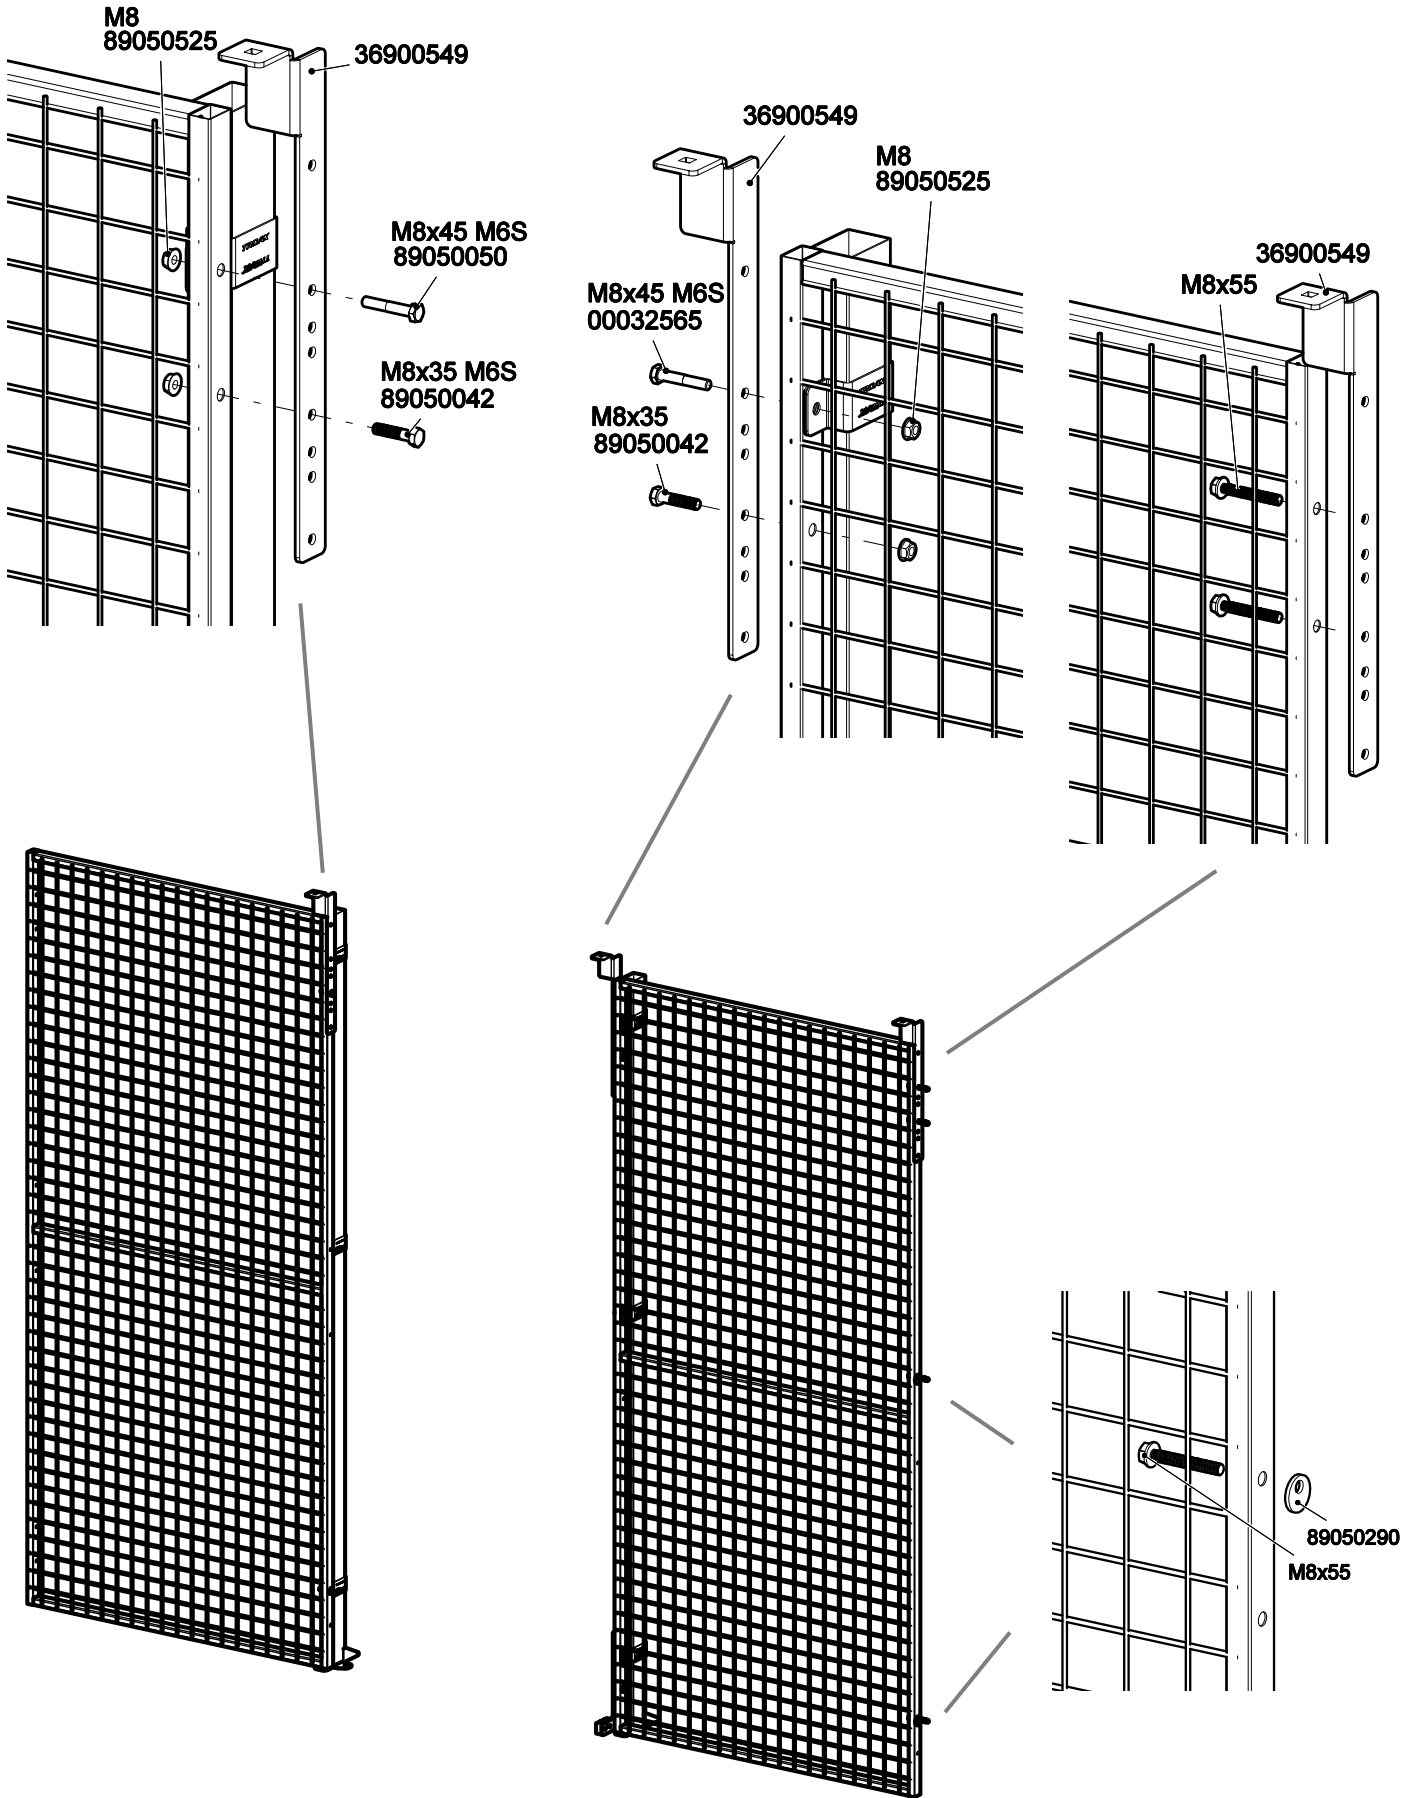


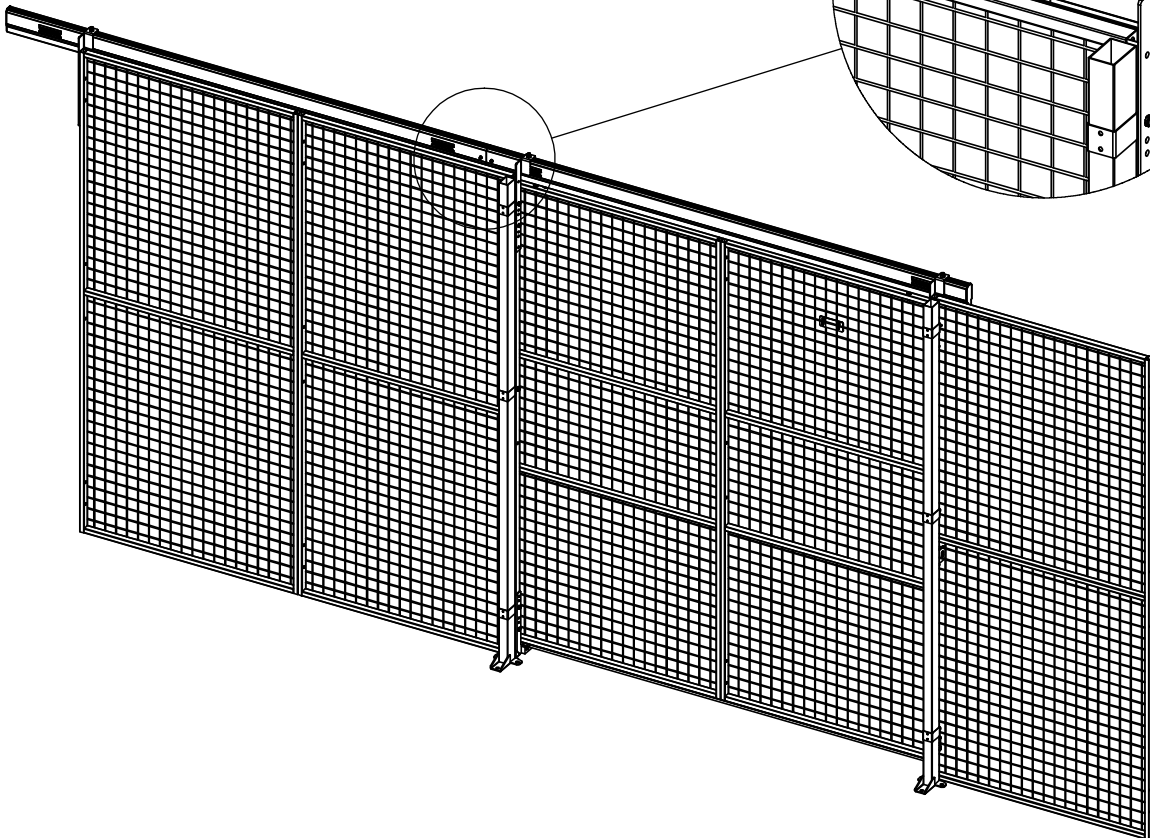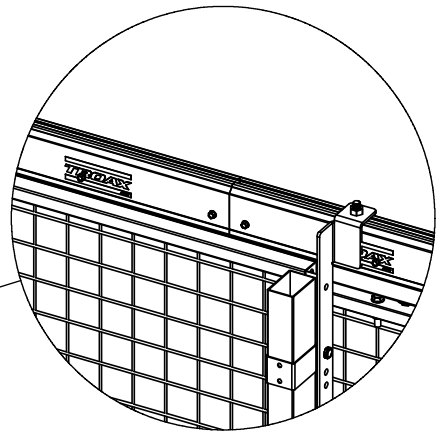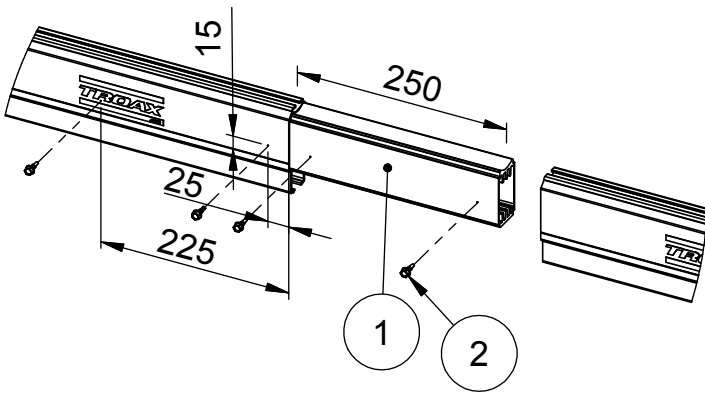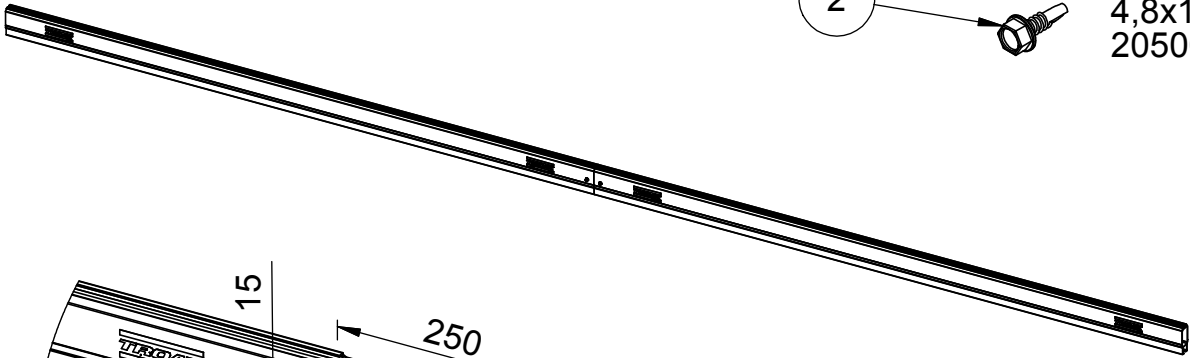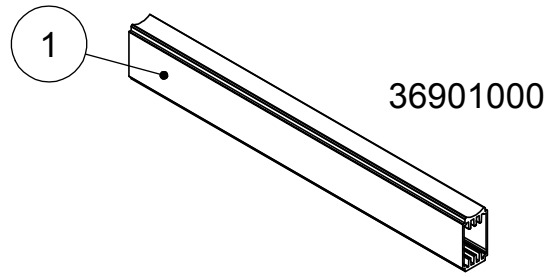

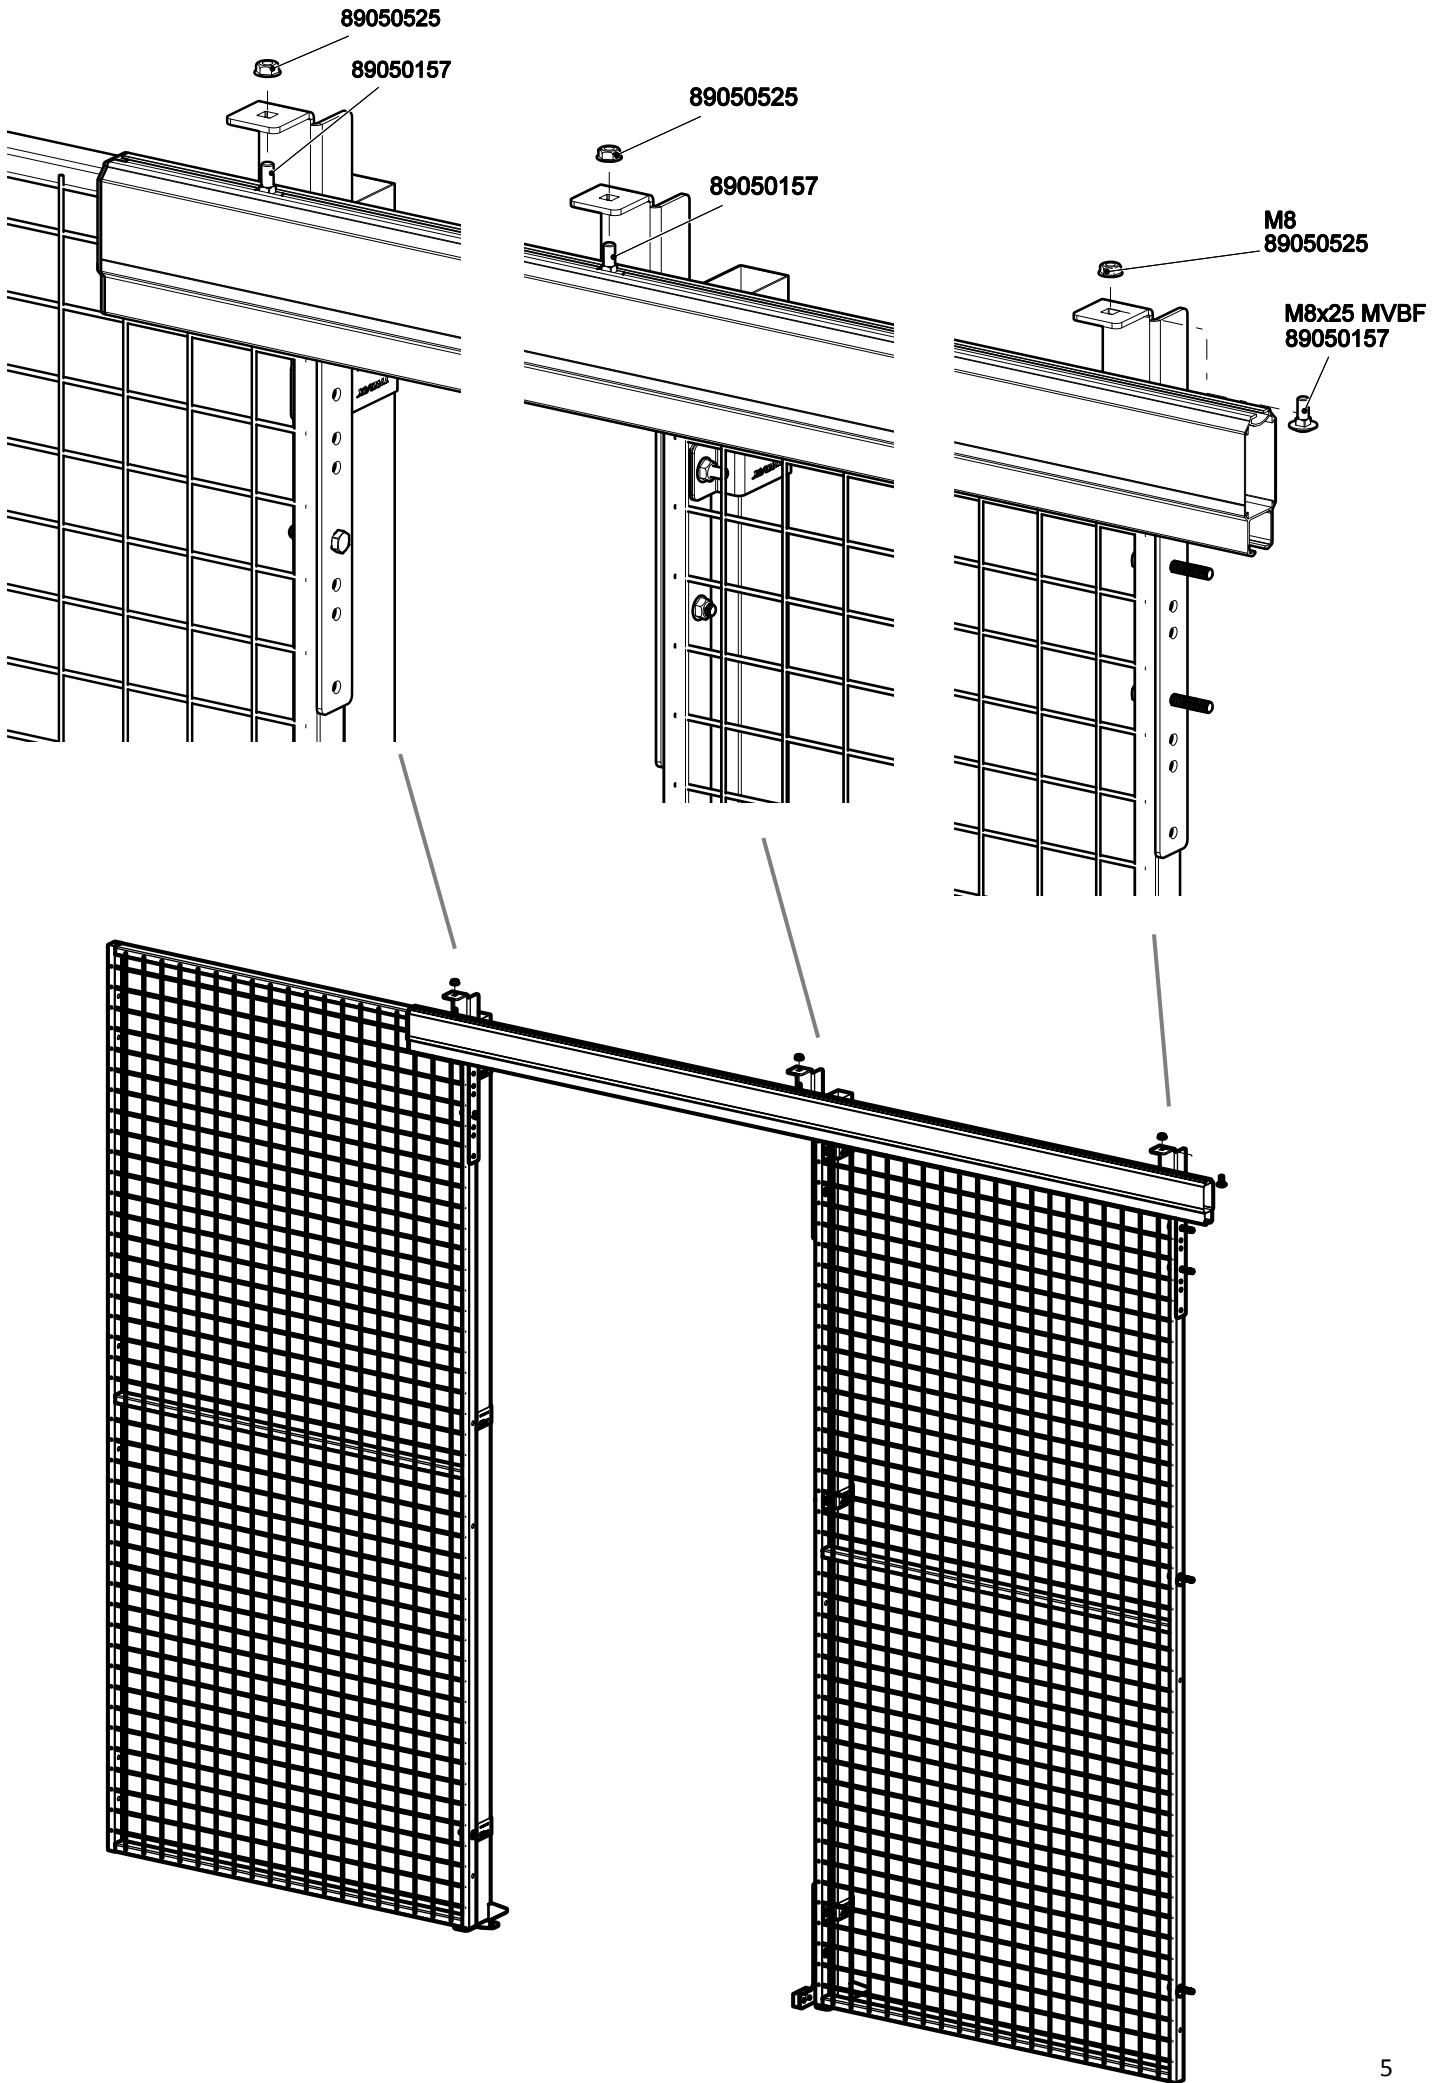

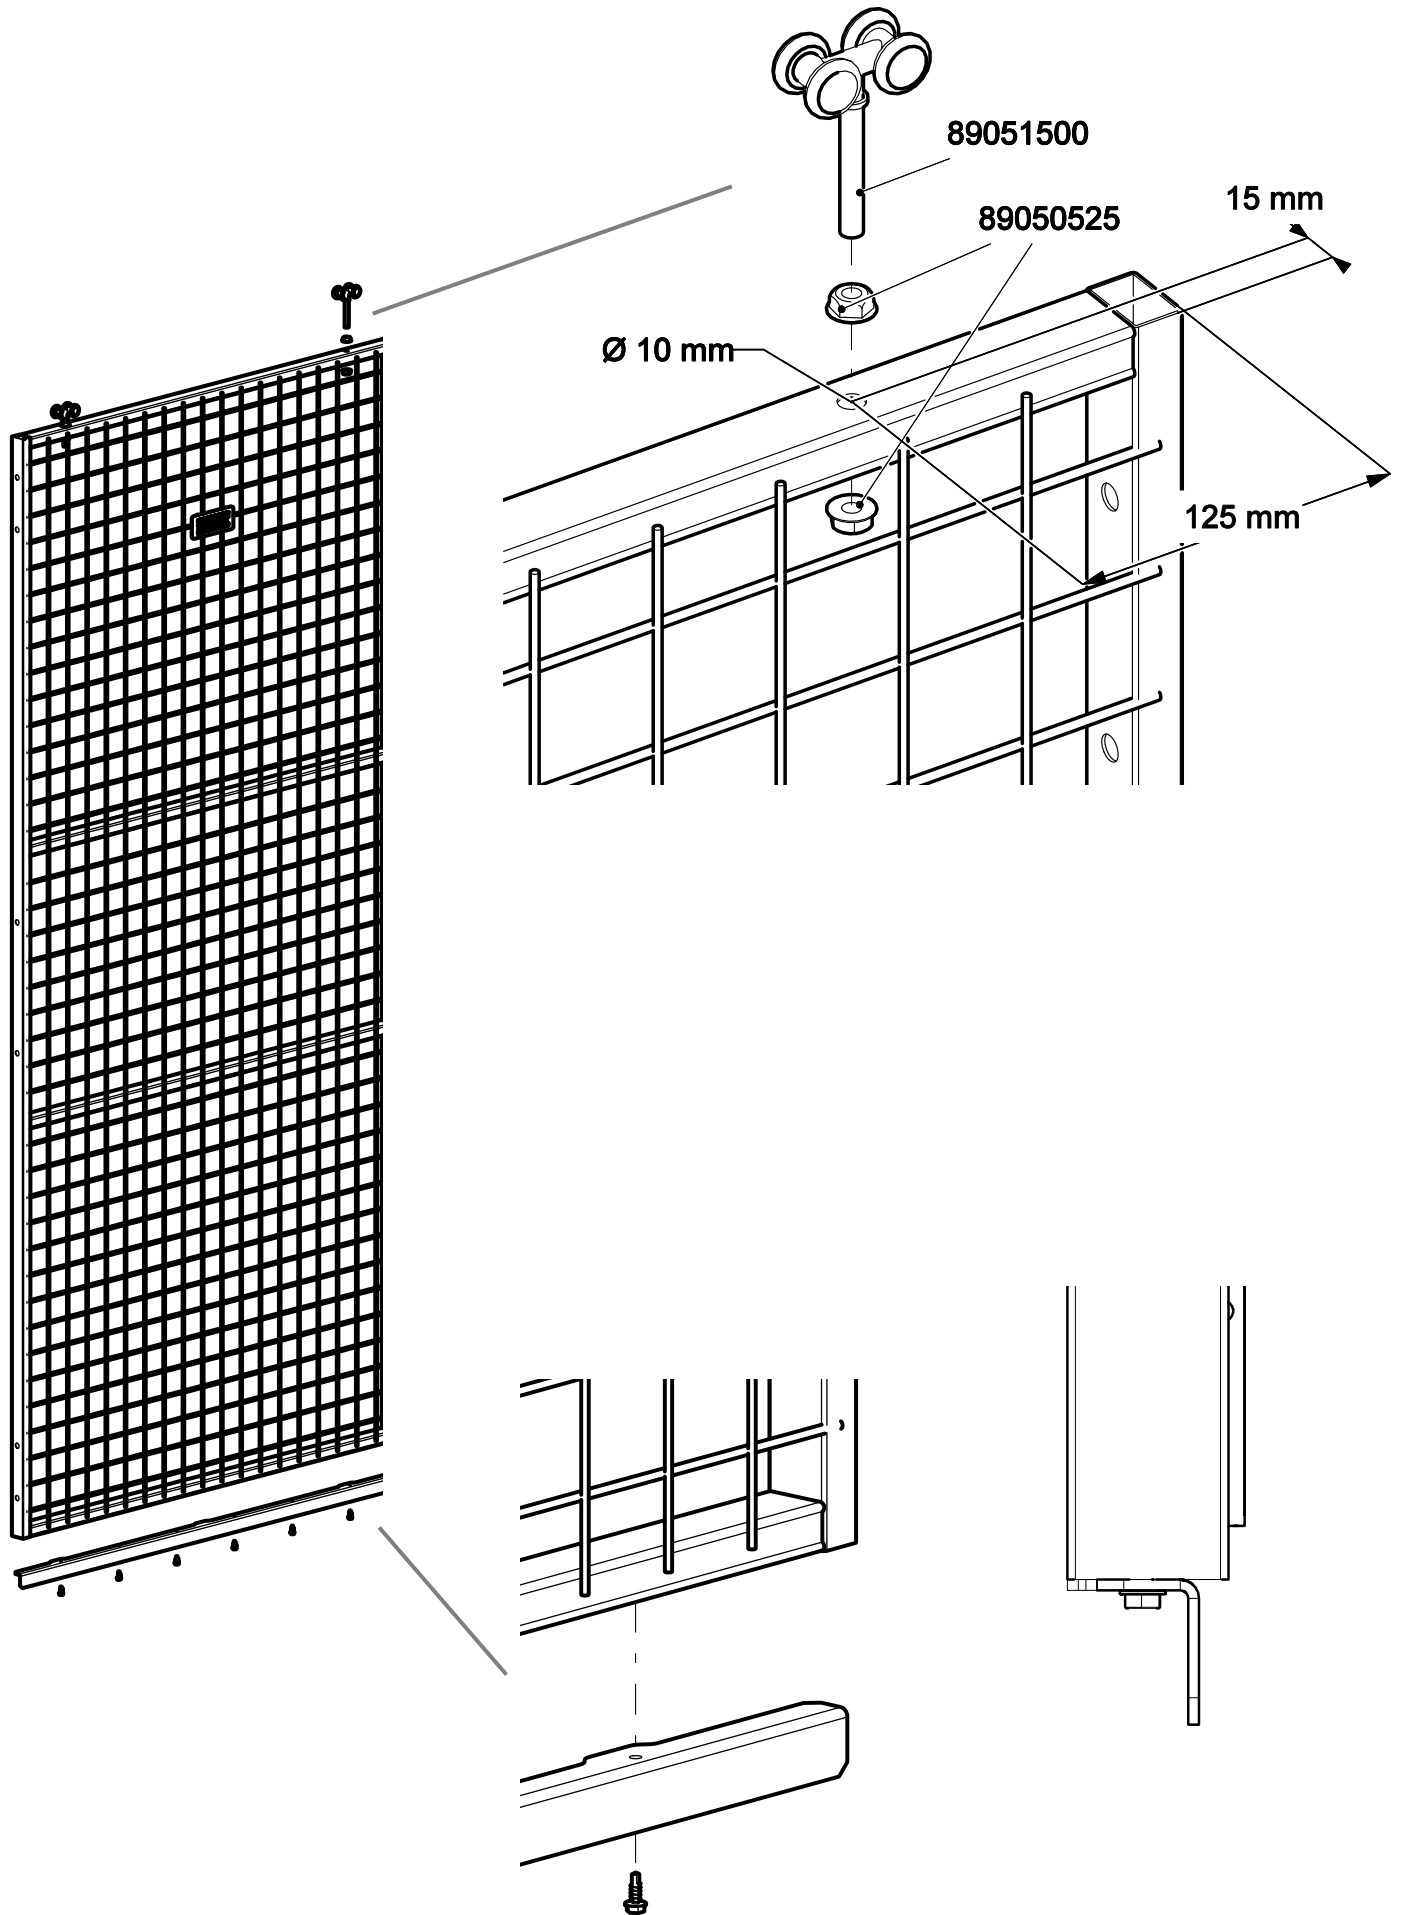

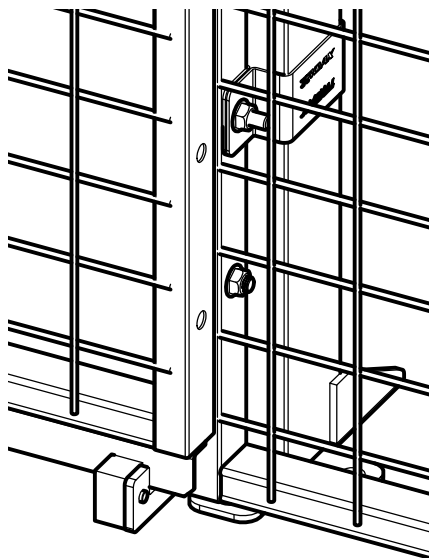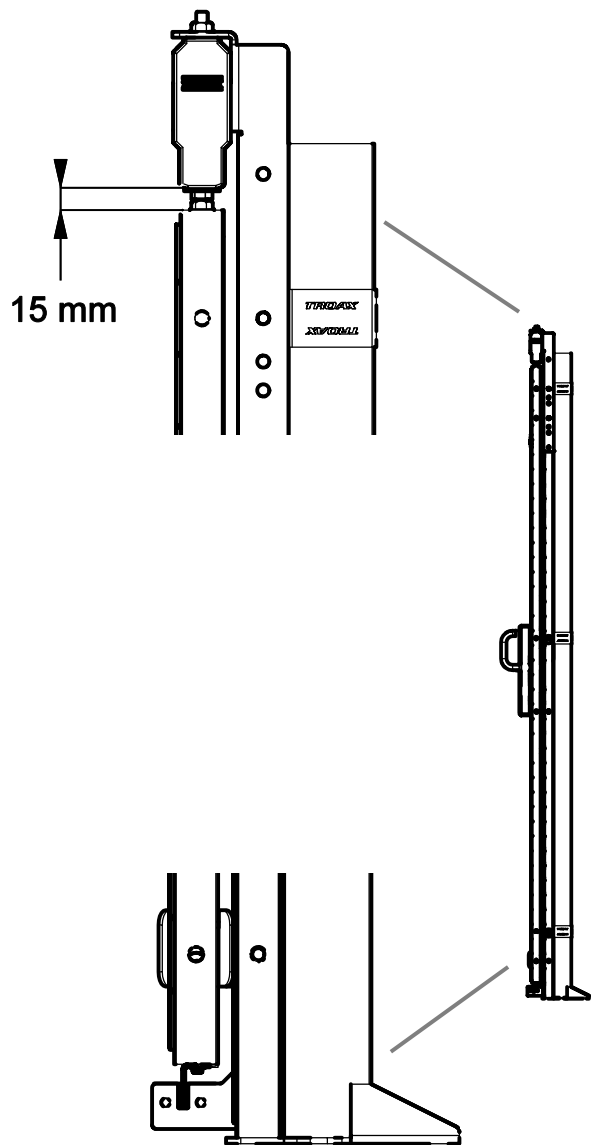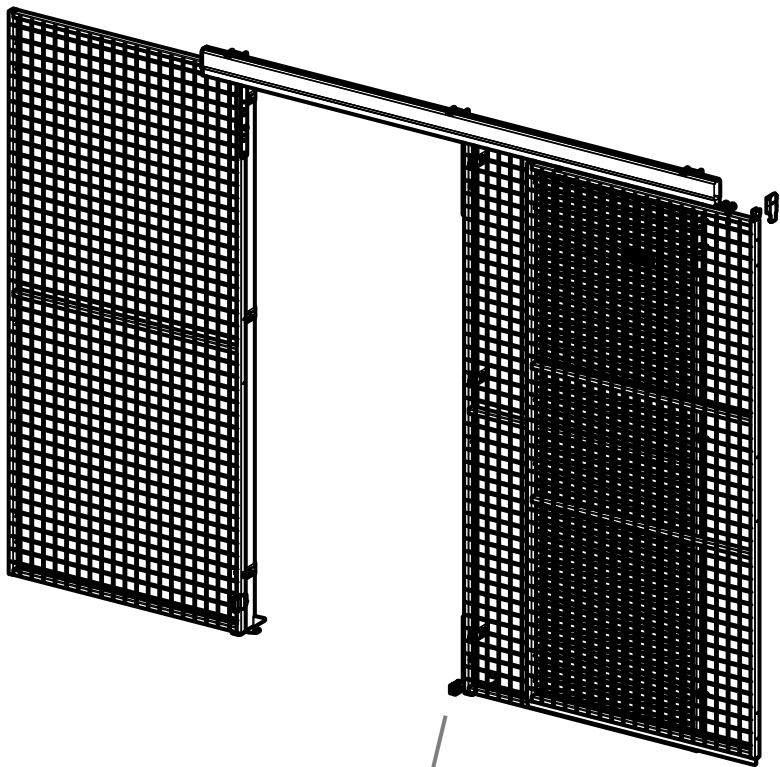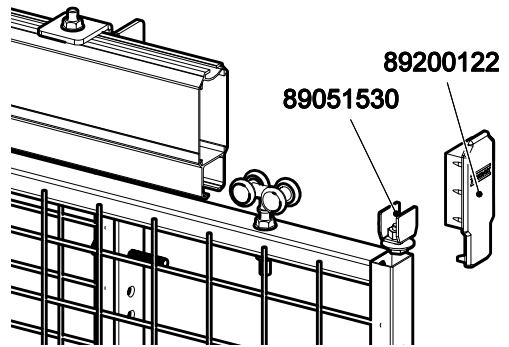

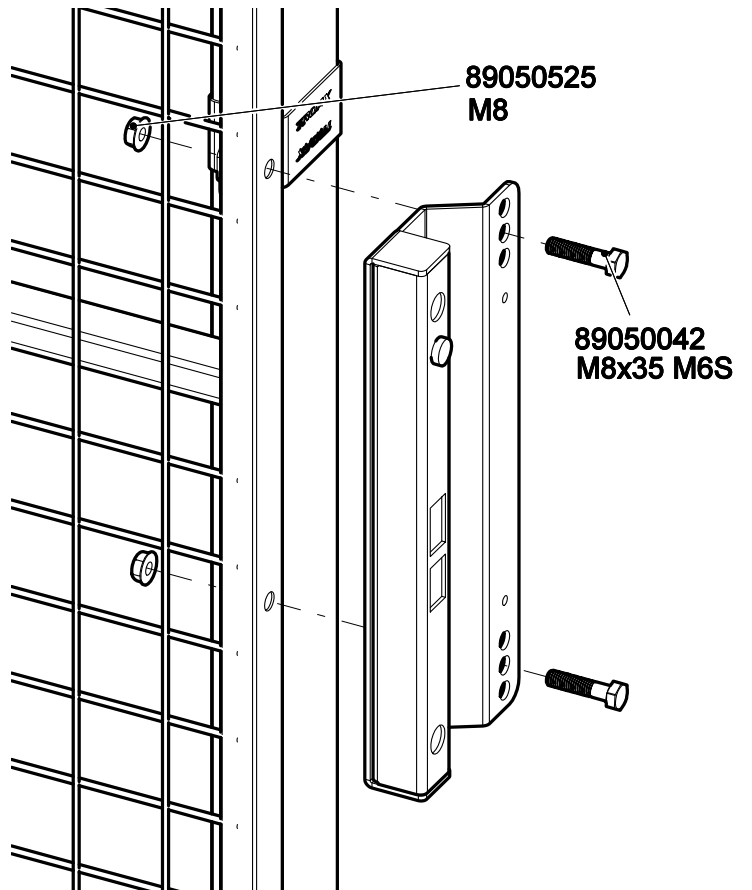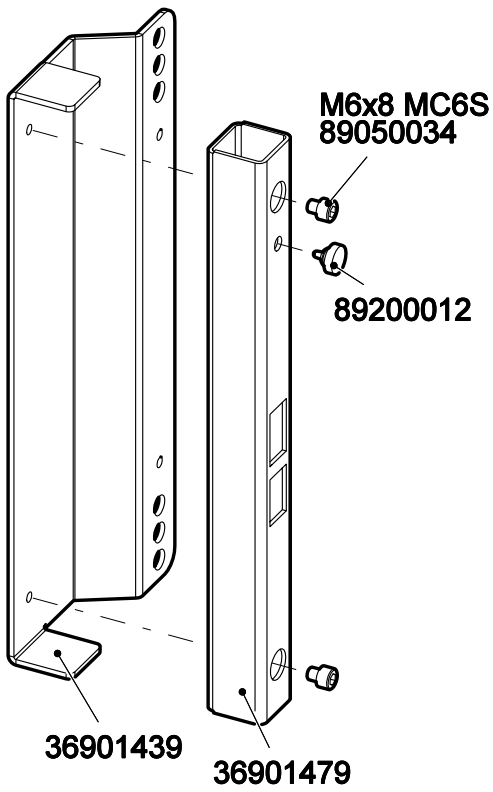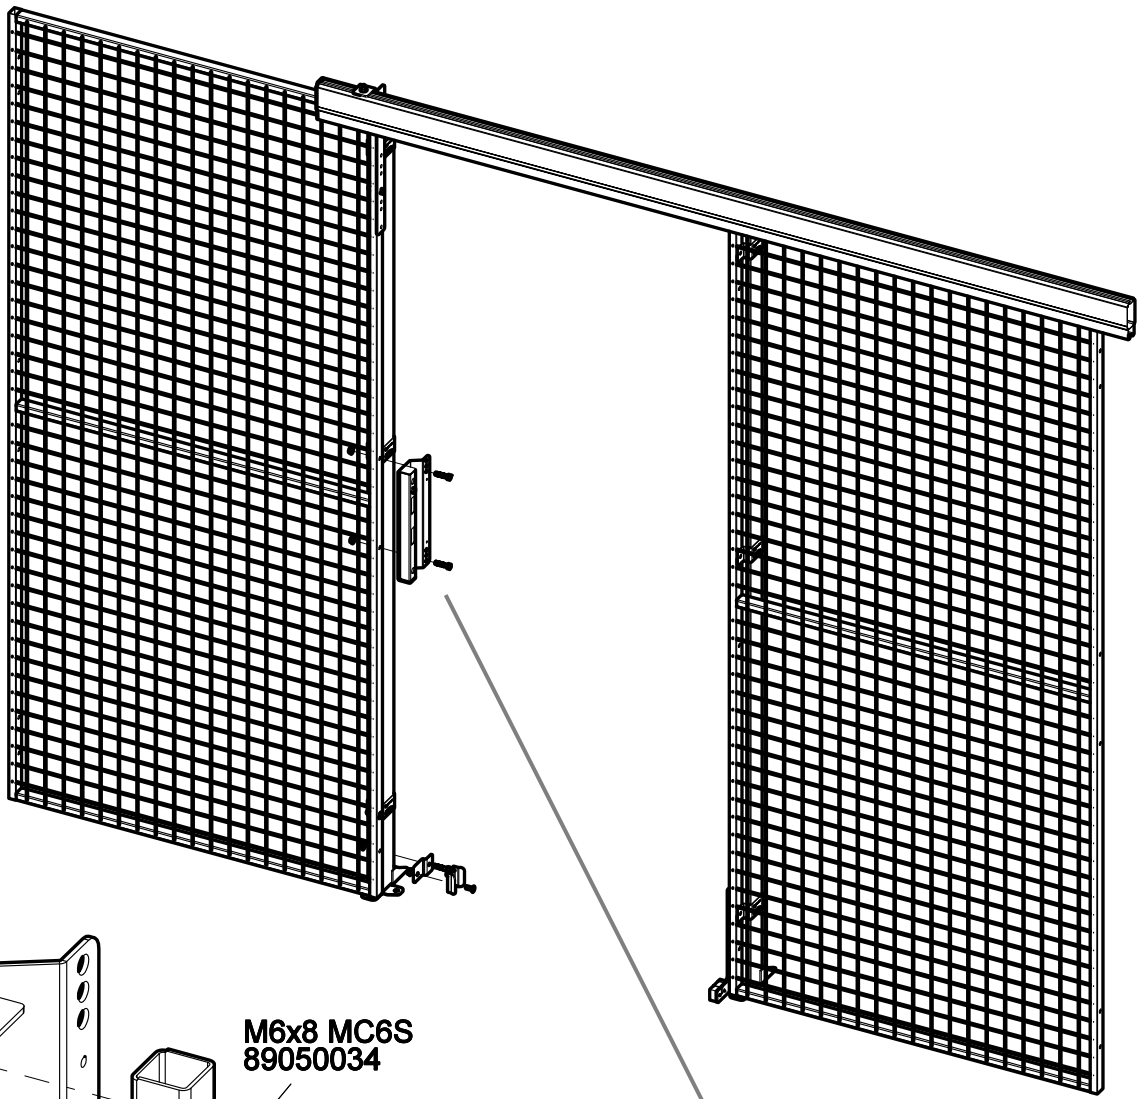



Cut out in UXSP

